



2.4GHz 802.11b/g/n AP/Router

User Guide

TABLE OF CONTENTS

INTRODUCTION	3
HARDWARE DESCRIPTION	3
APPLICATION SCENARIO	4
INITIAL CONFIGURATION.....	5
CONNECTING TO THE LOGIN PAGE	5
STATUS PAGE	6
EASY SETUP.....	6
OPERATION MODE – AP ROUTER	7
SETTINGS – PPPoE(ADSL).....	7
SETTINGS – STATIC (FIXED IP)	8
SETTINGS – CABLE/DYNAMIC IP (DHCP)	9
SETTINGS – PPTP.....	10
SETTINGS – L2TP.....	12
OPERATION MODE – AP BRIDGE	13
OPERATION MODE – CLIENT ROUTER	14
OPERATION MODE – CLIENT BRIDGE.....	16
ADVANCED SETUP	17
MANAGEMENT	18
ADVANCED SETTINGS	20
OPERATION MODE	21
FIREWALL CONFIGURATION	22
MAC/IP/PORT FILTERING	22
VIRTUAL SERVER SETTINGS.....	23
DMZ.....	24
FIREWALL	25
CONTENT FILTERING.....	26
NETWORK SETTINGS.....	27
WAN	27
LAN.....	31
ADVANCED ROUTING	31
WIRELESS SETTINGS	33
BASIC.....	33
SECURITY	34

INTRODUCTION


This is a MIMO IEEE 802.11b/g/n wireless indoor AP/ROUTER which supports data rate up to 150Mbps. 2.4GHz 802.11b/g/n AP/Router also integrated 5dBi detachable antenna and passive PoE for simplified installation.

HARDWARE DESCRIPTION

Below are 2.4GHz 802.11b/g/n AP/Router hardware descriptions



APPLICATION SCENARIO

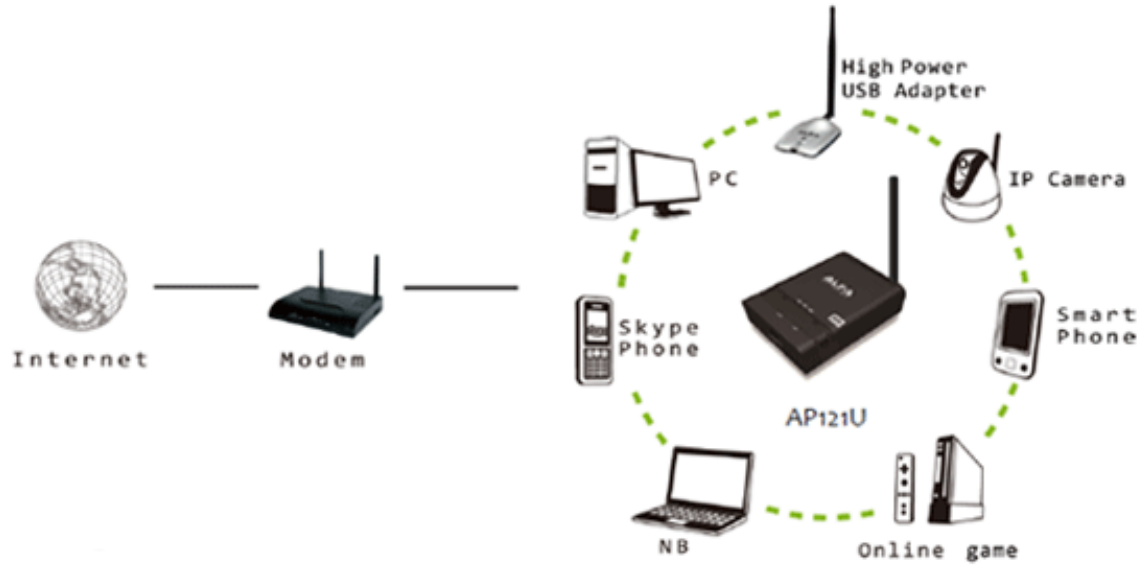


INITIAL CONFIGURATION

The 2.4GHZ 802.11B/G/N AP/ROUTER, 2.4GHz AP/ROUTER offers a user-friendly web-based management interface for the configuration of all the unit's features. Any PC directly attached to the unit can access the management interface using a web browser, such as Internet Explorer (version 6.0 or above).

CONNECTING TO THE LOGIN PAGE

It is recommended to make initial configuration changes by connecting a PC directly to the 2.4GHZ 802.11B/G/N AP/ROUTER's LAN port. The 2.4GHZ 802.11B/G/N AP/ROUTER has a default IP address of 192.168.2.1 and a subnet mask of 255.255.255.0. You must set your PC IP address to be on the same subnet as the 2.4GHZ 802.11B/G/N AP/ROUTER (that is, the PC and 2.4GHZ 802.11B/G/N AP/ROUTER addresses must both start 192.168.2.x). To access the 2.4GHZ 802.11B/G/N AP/ROUTER's management GUI interface, follow these steps:

1. Use your web browser to connect to the management interface using the default IP address of 192.168.2.1.
2. Log into the interface by entering the default username "admin" and password "admin," then click OK.

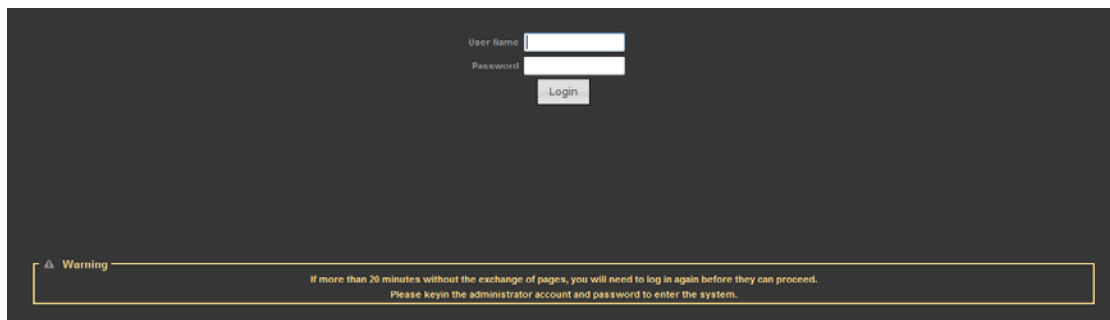

STATUS PAGE


After logging in to the web interface, the Status page displays. The Home page top-menu-bar shows the Status, Easy Setup, Advanced and Language.

Internet Configuration	
Connected Type DHCP	Connected Status
WAN IP Address	Subnet Mask
Default Gateway	Primary Domain Name Server
Secondary Domain Name Server	MAC Address 00:C0:CA:64:64:B5
LAN Configuration	
LAN IP Address 192.168.2.1	LAN Netmask 255.255.255.0
MAC Address 00:C0:CA:64:64:B4	
System Info	
Firmware Version V2.5 2012-06-27-13:42	System Time Sun, 01 Jan 2012 12:18:03
Operation Mode AP Router mode	Wireless MAC Address 00:C0:CA:64:64:B6

EASY SETUP

The Easy Setup is designed to help you to configure the basic settings required to get the 2.4GHZ 802.11B/G/N AP/ROUTER up and running. There are only a few basic steps you need to set up the 2.4GHZ 802.11B/G/N AP/ROUTER to get the connection.

Click on Easy Setup to bring up the wizard

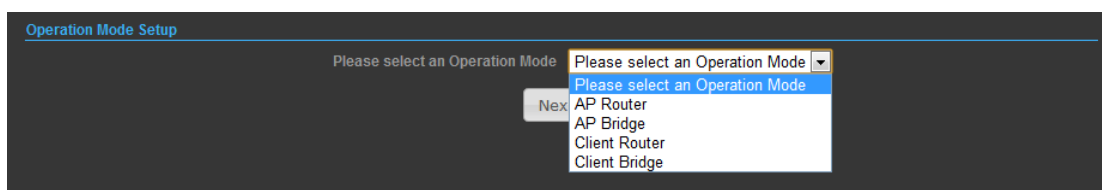

The screenshot shows the 'Operation Mode Setup' page. It features a label 'Please select an Operation Mode' followed by a dropdown menu. The dropdown menu is open, displaying four options: 'AP Router', 'AP Bridge', 'Client Router', and 'Client Bridge'. A 'Next' button is visible to the left of the dropdown menu.

If you want to configure a router connection, please select [AP Router](#)


If you want to configure to an access point, please select [AP Bridge](#)

If you want to configure to WISP, please select [Client Router](#)

If you want to configure to WiFi client, please select [Client Bridge](#)


OPERATION MODE – AP ROUTER

Choose menu “Easy Setup” and select AP Router if you want to configure a router connection.

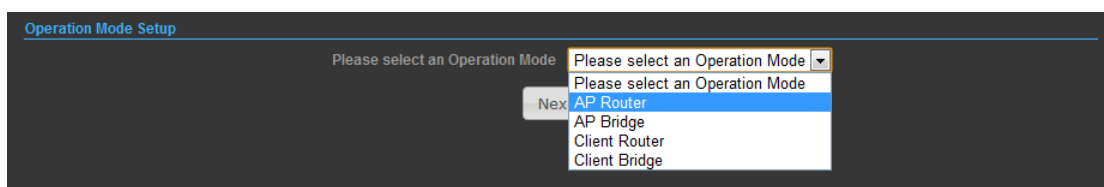


SETTINGS – PPPoE(ADSL)

- 1) Select PPPoE to be assigned automatically from an Internet service provider (ISP) through a DSL modem using Point-to-Point Protocol over Ethernet (PPPoE).

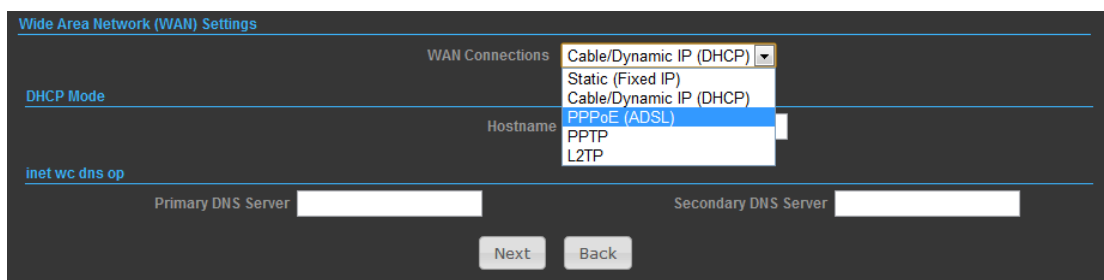


- 2)

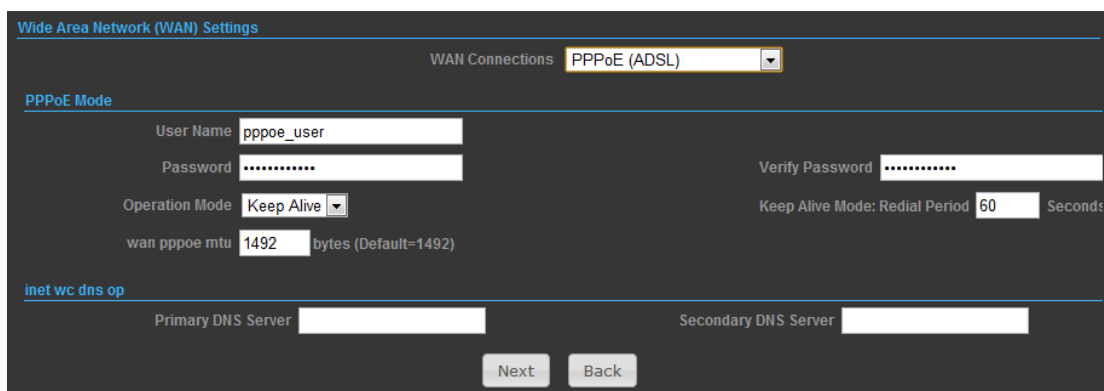

- ◆ **User Name** — Sets the PPPoE user name for the WAN port.
(Default: pppoe_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPPoE password for the WAN port.
(Default: pppoe_password; Range: 1~32 characters)

- ◆ **Verify Password** — Prompts you to re-enter your chosen password.
- ◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time.

3)

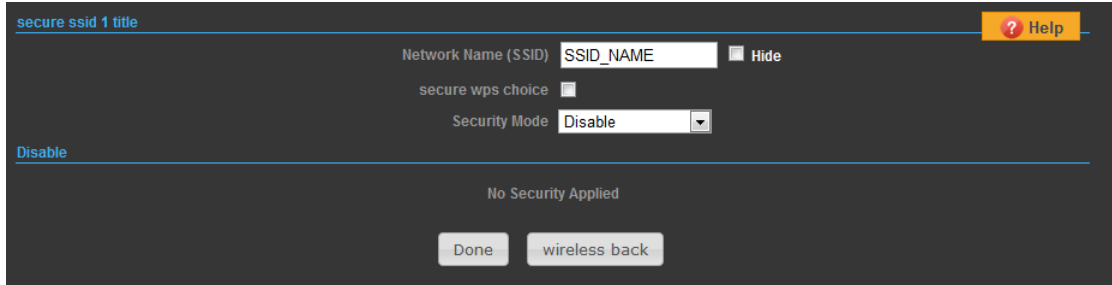


Security Setup

Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

Security Mode — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

SETTINGS – STATIC (FIXED IP)

- 1) Select Static(Fixed IP), if your Internet service provider (ISP) to be permanent address on the Internet. A Static IP address is a number (in the form of a dotted quad)

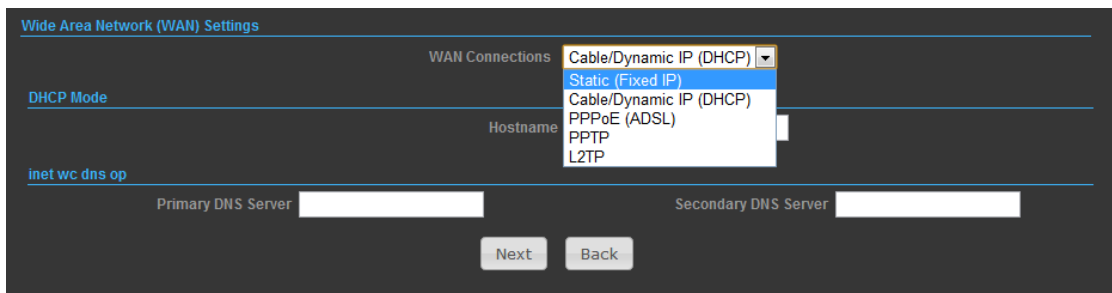

2)

The screenshot shows the 'Wide Area Network (WAN) Settings' interface. At the top, 'WAN Connections' is set to 'Static (Fixed IP)'. Below this, the 'Static Mode' section contains three input fields: 'IP Address' with the value '192.168.3.1', 'Subnet Mask' with the value '255.255.255.0', and 'Default Gateway' which is currently empty. The 'DNS Settings (Optional)' section at the bottom has two input fields for 'Primary DNS Server' and 'Secondary DNS Server', both of which are empty. At the very bottom, there are 'Next' and 'Back' buttons.

- ◆ **IP Address** — Sets the static IP address.
- ◆ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)
- ◆ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

3)

The screenshot shows the 'secure ssid 1 title' security setup screen. It features a 'Network Name (SSID)' field with the value 'SSID_NAME' and a 'Hide' checkbox. Below that is a 'secure wps choice' checkbox and a 'Security Mode' dropdown menu set to 'Disable'. A 'Disable' link is visible on the left. At the bottom, the text 'No Security Applied' is displayed, along with 'Done' and 'wireless back' buttons. A 'Help' button is located in the top right corner.

Security Setup

Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

Security Mode — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

SETTINGS – CABLE/DYNAMIC IP (DHCP)

- 1) Select Cable/Dynamic IP (DHCP), if your Internet service provider (ISP) use a DHCP service to assign your Router an IP address when connecting to the

Internet.

Wide Area Network (WAN) Settings

WAN Connections: Cable/Dynamic IP (DHCP) (selected), Static (Fixed IP), Cable/Dynamic IP (DHCP), PPPoE (ADSL), PPTP, L2TP

DHCP Mode

Hostname: _____

Primary DNS Server: _____ Secondary DNS Server: _____

Next Back

2)

Wide Area Network (WAN) Settings

WAN Connections: Cable/Dynamic IP (DHCP)

DHCP Mode

Hostname: DHCP

Primary DNS Server: _____ Secondary DNS Server: _____

Next Back

The host name that you selected from the DHCP service provider.

3)

secure ssid 1 title

Network Name (SSID): SSID_NAME Hide

secure wps choice

Security Mode: Disable

Disable

No Security Applied

Done wireless back

Security Setup

Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

Security Mode — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

SETTINGS – PPTP

1) Select PPTP, if you are using PPTP service to gain connection to the Internet.

Wide Area Network (WAN) Settings

WAN Connections: Cable/Dynamic IP (DHCP) (selected), Static (Fixed IP), Cable/Dynamic IP (DHCP), PPPoE (ADSL), PPTP, L2TP

DHCP Mode: []

Hostname: []

inet wc dns op

Primary DNS Server: [] Secondary DNS Server: []

Next Back

2)

Wide Area Network (WAN) Settings

WAN Connections: PPTP

PPTP Mode

Server IP: pptp_server

User Name: pptp_user Password: []

Address Mode: Dynamic

Operation Mode: Keep Alive Keep Alive Mode: Redial Period 60 Seconds

inet wc dns op

Primary DNS Server: [] Secondary DNS Server: []

Next Back

- ◆ **Server IP** — Sets the PPTP server IP Address. (Default: pptp_server)
- ◆ **User Name** — Sets the PPTP user name for the WAN port. (Default: pptp_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPTP password for the WAN port. (Default: pptp_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a PPTP network mode. (Default: Dynamic IP)
- ◆ **Operation Mode** — Enables and configures the keep alive time.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

3)

secure ssid 1 title

Network Name (SSID): SSID_NAME [] Hide []

secure wps choice []

Security Mode: Disable

Disable

No Security Applied

Done wireless back

Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

Security Mode — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

SETTINGS – L2TP

1) Select L2TP, if you are using PPTP service to gain connection to the Internet.

The screenshot shows the 'Wide Area Network (WAN) Settings' page. The 'WAN Connections' dropdown menu is open, showing options: Cable/Dynamic IP (DHCP), Static (Fixed IP), Cable/Dynamic IP (DHCP), PPPoE (ADSL), PPTP, and L2TP. The 'L2TP' option is highlighted. Below the menu, there are fields for 'Primary DNS Server' and 'Secondary DNS Server', and 'Next' and 'Back' buttons.

2)


The screenshot shows the 'Wide Area Network (WAN) Settings' page with 'L2TP' selected in the 'WAN Connections' dropdown. The 'L2TP Mode' section contains the following fields: 'Server IP' (I2tp_server), 'User Name' (I2tp_user), 'Password' (masked with dots), 'Address Mode' (Static), 'IP Address', 'Subnet Mask', 'Operation Mode' (Keep Alive), and 'Keep Alive Mode: Redial Period' (60 Seconds). Below these are 'Primary DNS Server' and 'Secondary DNS Server' fields, and 'Next' and 'Back' buttons.

- ◆ **Server IP** — Sets the L2TP server IP Address. (Default: I2tp_server)
- ◆ **User Name** — Sets the L2TP user name for the WAN port. (Default: I2tp_user; Range: 1~32 characters)
- ◆ **Password** — Sets a L2TP password for the WAN port. (Default: I2tp_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a L2TP network mode. (Default: Dynamic IP)
- ◆ **Operation Mode** — Enables and configures the keep alive time.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS

server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

3)

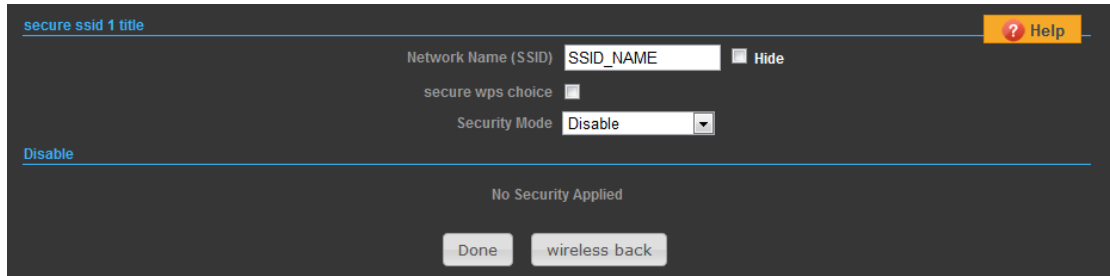


Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.


Security Mode — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

OPERATION MODE – AP BRIDGE

Choose menu “Easy Setup” and select AP Bridge if you want to configure to an access point.

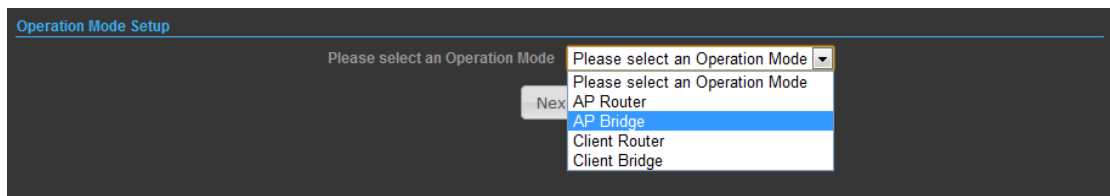

1)

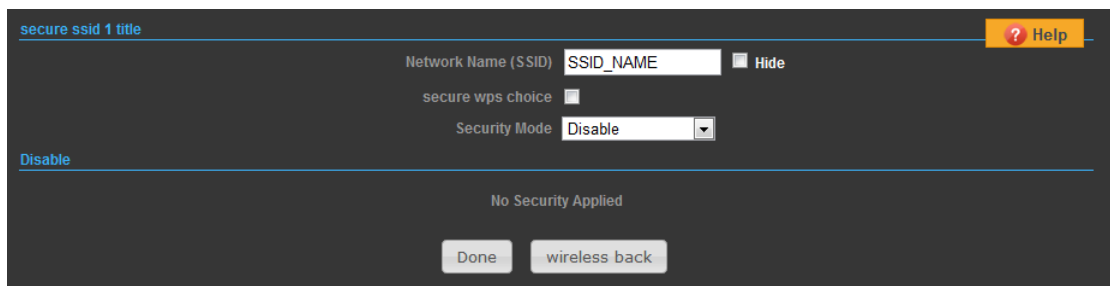


Network Name (SSID) — SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

Security Mode — Select the security method and then configure the required


parameters. (Options: Disabled, Open, Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled

OPERATION MODE – CLIENT ROUTER

In the Client Router mode is also known as WISP. The 2.4GHZ 802.11B/G/N AP/ROUTER wireless side is connected to the remote AP (Base-Station) as in Client Infrastructure mode. Between the wireless and LAN is the IP sharing router function. The WAN is on the wireless side.

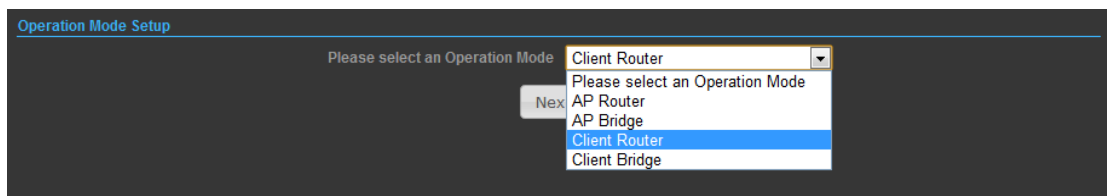

- 2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; Alfa_B is the SSID that we are going to connect in this example. Press **Next** button when finished.

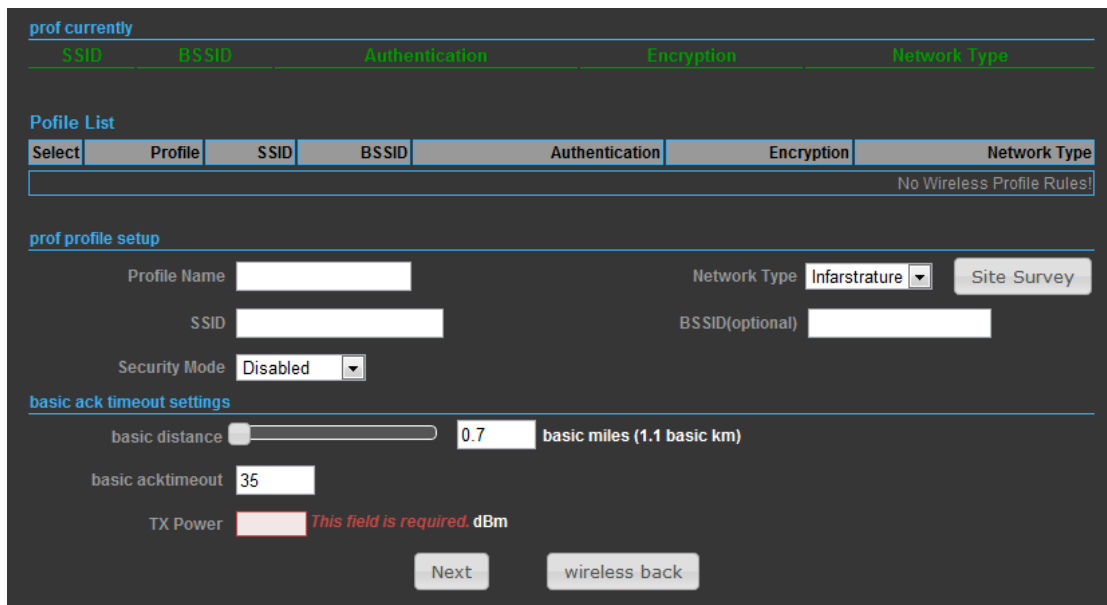

prof currently

SSID	BSSID	Authentication	Encryption	Network Type				
Profile List								
Select	Profile	SSID	BSSID	Authentication	Encryption	Network Type		
<input type="radio"/>	Alfa_B	00:C0:CA:5F:40:C2	11 Mb/s	8/94(-89 dBm)	6	WPA1-Personal	TKIP/CCMP	Infrastructure
<input type="radio"/>	AP121	00:C0:CA:60:4B:E2	54 Mb/s	50/94(-76 dBm)	6	WPA2-Personal	CCMP	Infrastructure
<input type="radio"/>	Laser	B0:4B:7A:B5:01:C4	54 Mb/s	0/94(-95 dBm)	12	WPA2-Personal	CCMP	Infrastructure

3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Next** button to continue.

prof currently

SSID	BSSID	Authentication	Encryption	Network Type		
Profile List						
Select	Profile	SSID	BSSID	Authentication	Encryption	Network Type
No Wireless Profile Rules						

prof profile setup

Profile Name: Network Type:

SSID: BSSID(optional):

Security Mode: Encryption:

Pass Phrase:

basic ack timeout settings

basic distance: basic miles (1.1 basic km)

basic acktimeout:

TX Power: *This field is required. dBm*

4) Finally, you need to tell the system about IP address received from WAN, DHCP Hostname, and DNS Server then press **Next** button to finish the wizard.

Wide Area Network (WAN) Settings

WAN Connections:

DHCP Mode

Hostname:


inet wc dns op

Primary DNS Server:



Secondary DNS Server:

OPERATION MODE – CLIENT BRIDGE

Choose menu “Easy Setup” and select Client Bridge if you want to configure to WiFi client.

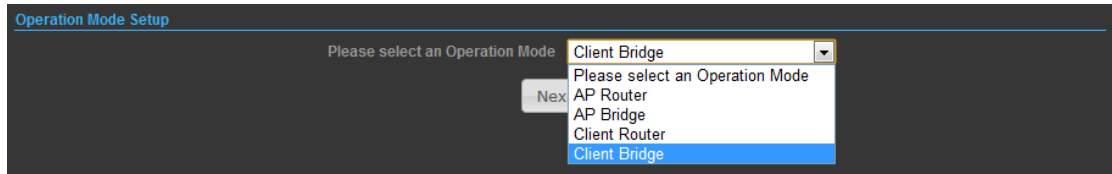

- 2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; Alfa_B is the SSID that we are going to connect in this example. Press **Next** button when finished.

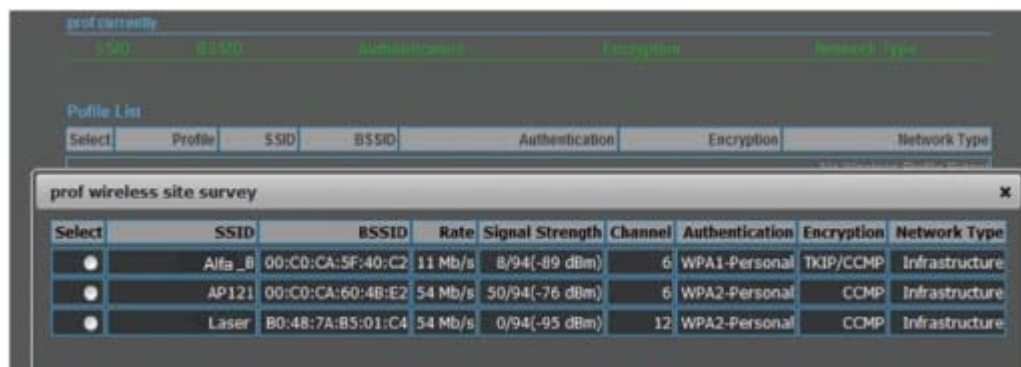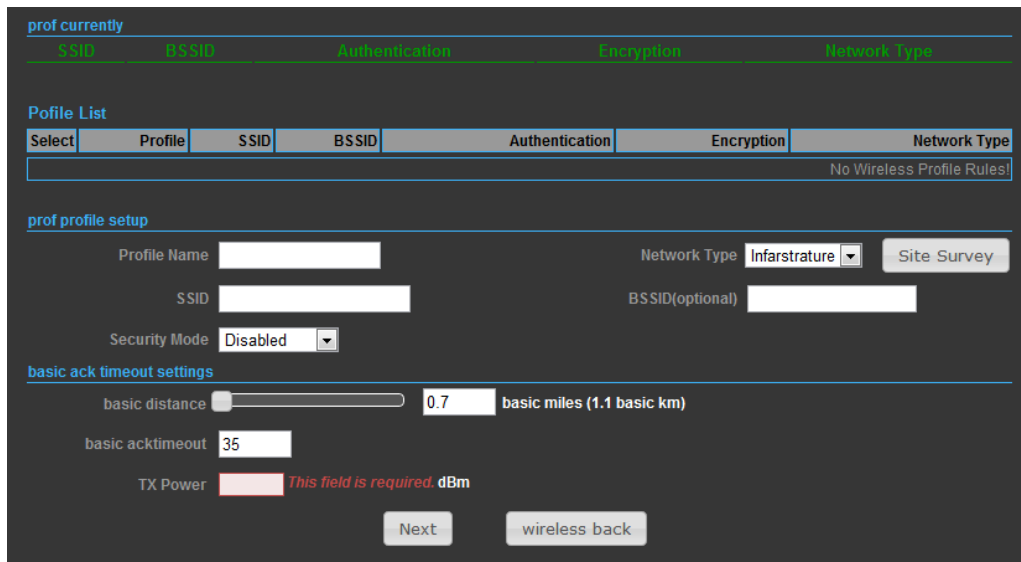

- 3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Next** button to finish the wizard.

prof currently

SSID	BSSID	Authentication	Encryption	Network Type
No Wireless Profile Rules				

Profile List

Select	Profile	SSID	BSSID	Authentication	Encryption	Network Type
No Wireless Profile Rules						

prof profile setup

Profile Name: Network Type:

SSID: BSSID(optional):

Security Mode: Encryption:

Pass Phrase:

basic ack timeout settings


basic distance: basic miles (1.1 basic km)

basic acktimeout:

TX Power: *This field is required. dBm*


ADVANCED SETUP

In the Advanced Manual Bar, it includes all the settings such as firmware upgrade, LAN, WAN and wireless settings that change the RF behaviors. It is important to read through this section before attempting to make changes.

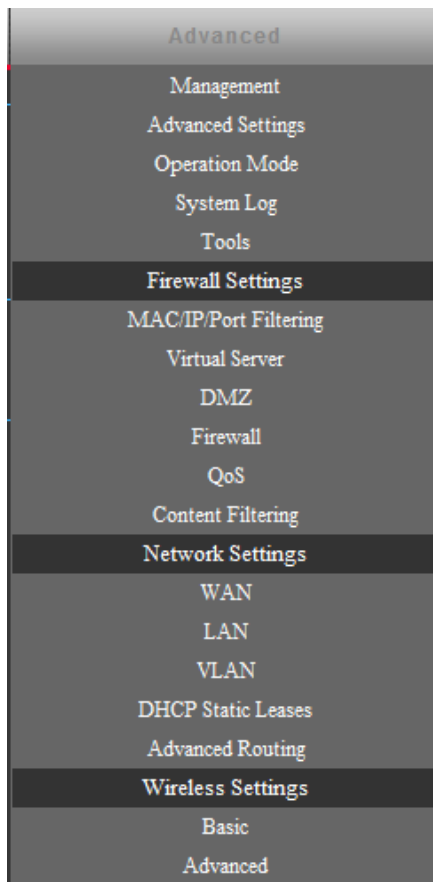

MANAGEMENT

The Management section is provided for configuration of administrative needs such as language type, user name / Password, firmware upgrade, export and import settings, load factory defaults and reboots system.

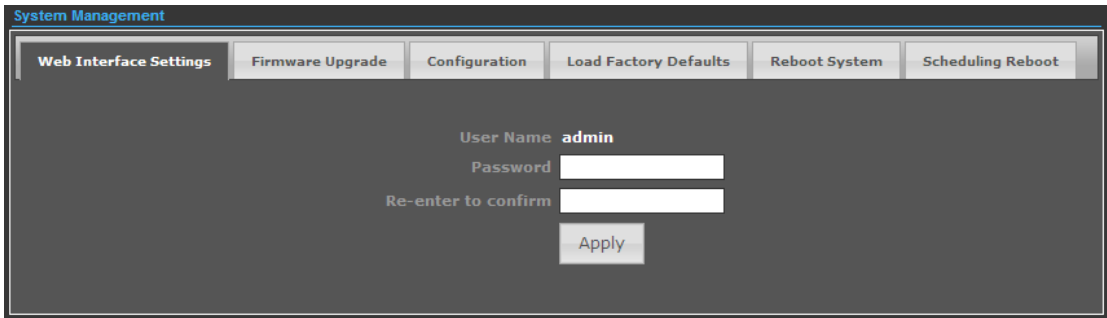

System Management

Web Interface Settings | Firmware Upgrade | Configuration | Load Factory Defaults | Reboot System | Scheduling Reboot


User Name **admin**

Password

Re-enter to confirm

Apply

◆ **Password** — The new password must not exceed 32 characters in length and must not include any spaces. Enter the new password a second time to confirm it.

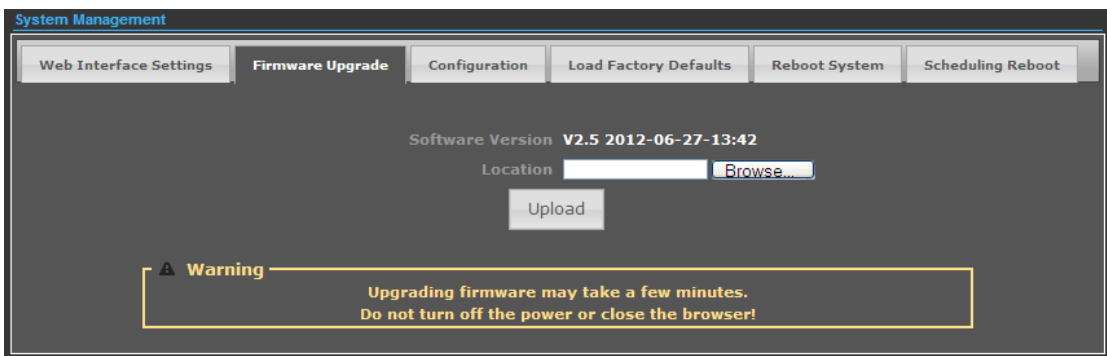

System Management

Web Interface Settings | **Firmware Upgrade** | Configuration | Load Factory Defaults | Reboot System | Scheduling Reboot

Software Version **V2.5 2012-06-27-13:42**

Location [Browse...](#)

Upload

Warning
Upgrading firmware may take a few minutes.
Do not turn off the power or close the browser!

◆ **Software Version** - This displays the current firmware version.

To upgrade the Router's firmware, follow these instructions below:


1. Download a more recent firmware upgrade file from our website.
2. Type the path and file name of the update file into the **File** field. Or click the **Browse** button to locate the update file.
3. Click the **Upgrade** button.

Note:

1. New firmware versions are posted at our website and can be downloaded for free.
There is no need to upgrade the firmware unless the new firmware has a new feature you want to use. However, when experiencing problems caused by the Router rather than the configuration, you can try to upgrade the firmware.
2. When you upgrade the Router's firmware, you may lose its current configurations, so before upgrading the firmware please write down some of your customized settings to


avoid losing important settings.

3. Do not turn off the Router or press the Reset button while the firmware is being upgraded, otherwise, the Router may be damaged.
4. The Router will reboot after the upgrading has been finished.

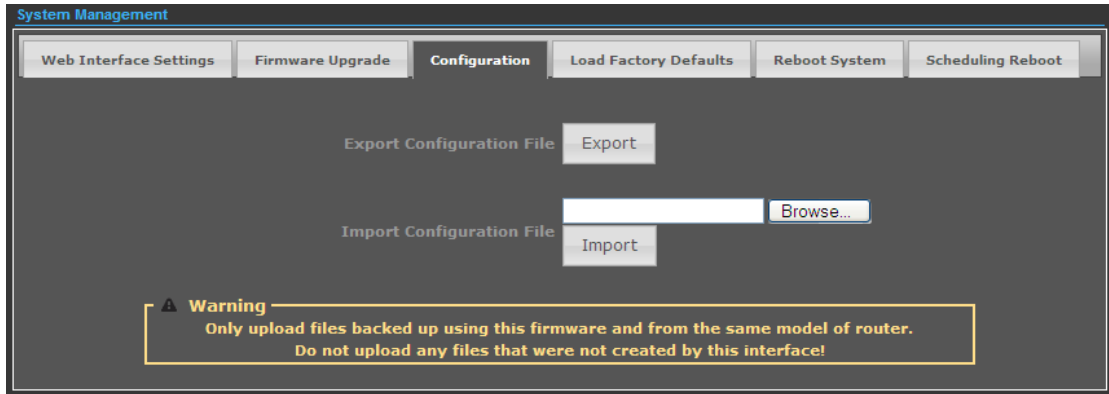


◆ **Export Settings** — Click the Export Button to download current router configuration to your PC.

◆ **Import Settings** — Click the Import Button to browse for the configuration file that is currently saved on your PC. Click Import to overwrite all current configurations with the one in the configuration file.

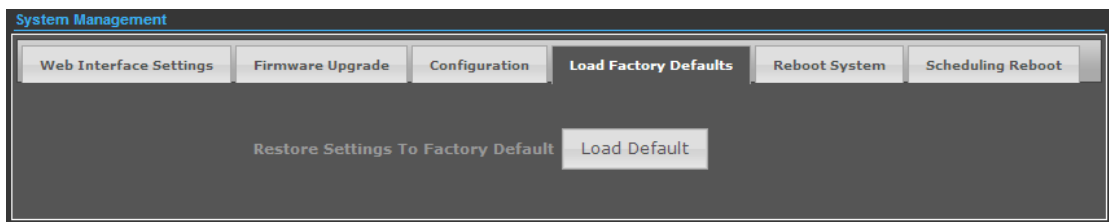


◆ **Load Factory Defaults** — If you have problems with 2.4GHZ 802.11B/G/N AP/ROUTER, which might be a result from changing some settings, but you are unsure what settings exactly, you can restore the factory defaults by click the Load Default Button.

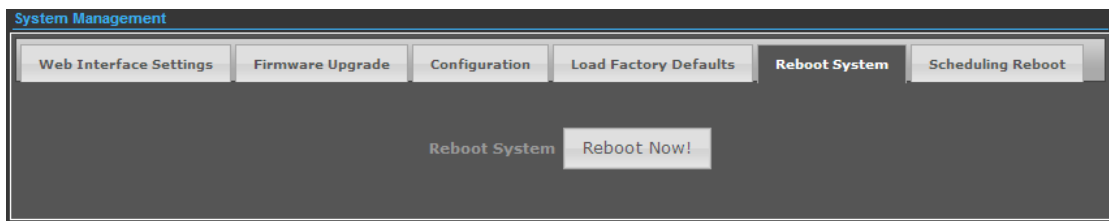

◆ **Reboot System** — If you want to reboot the 2.4GHZ 802.11B/G/N AP/ROUTER, click the Reboot Now Button.

ADVANCED SETTINGS

The Advanced Settings section is provided for configuration of Time Zone, DDNS, UPnP, SNMP, and SSH.

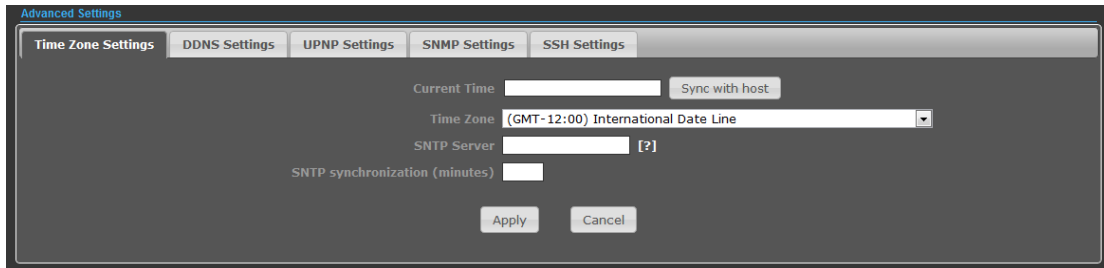


The screenshot shows the 'Time Zone Settings' tab. It includes a 'Current Time' field with a 'Sync with host' button, a 'Time Zone' dropdown menu set to '(GMT-12:00) International Date Line', an 'SNTP Server' field with a help icon, and an 'SNTP synchronization (minutes)' field. 'Apply' and 'Cancel' buttons are at the bottom.

◆ **Time Zone Settings** — The Time Zone Settings allows you to configure, update and maintain the correct time on the 2.4GHZ 802.11B/G/N AP/ROUTER's internal system clock.

◆ **SNTP Server** — Enter the address of an SNTP server to receive time updates.

◆ **SNTP synchronization (minutes)** — Specify the interval between SNTP server updates.

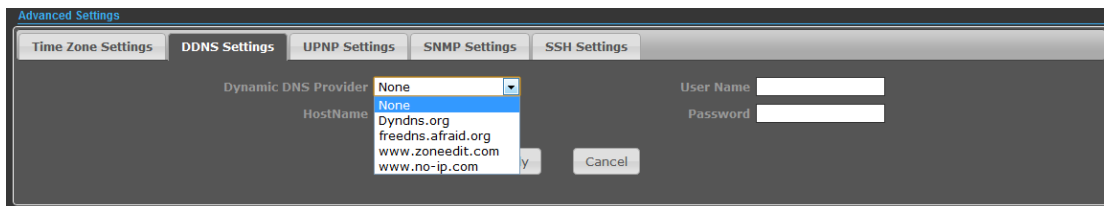


The screenshot shows the 'DDNS Settings' tab. It features a 'Dynamic DNS Provider' dropdown menu with a list of providers including 'None', 'Dyndns.org', 'freedns.afraid.org', 'www.zoneedit.com', and 'www.no-ip.com'. There are also 'User Name' and 'Password' text input fields. 'Apply' and 'Cancel' buttons are at the bottom.

DDNS Settings — DDNS lets you assign a fixed host and domain name to dynamic Internet IP address. It is useful when you are hosting your own website, FTP server, or other server behind the 2.4GHZ 802.11B/G/N AP/ROUTER. Before using this feature, you need to sign up for DDNS service at www.dyndns.org, a DDNS service provider.

◆ **User Name** — Sets the DDNS user name for the connection.


◆ **Password** — Sets a DDNS password for the connection.

◆ **HostName** — The host name that you selected from the DDNS service provider.

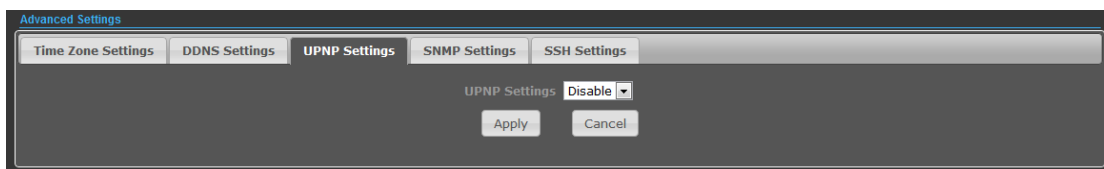


The screenshot shows the 'UPNP Settings' tab. It has a 'UPNP Settings' dropdown menu set to 'Disable'. 'Apply' and 'Cancel' buttons are at the bottom.

UPNP Settings – UPnP permits network devices to discover other network device(s) preference and establish functional network services for data sharing, communication, and entrainment. Default setting is Disabled.

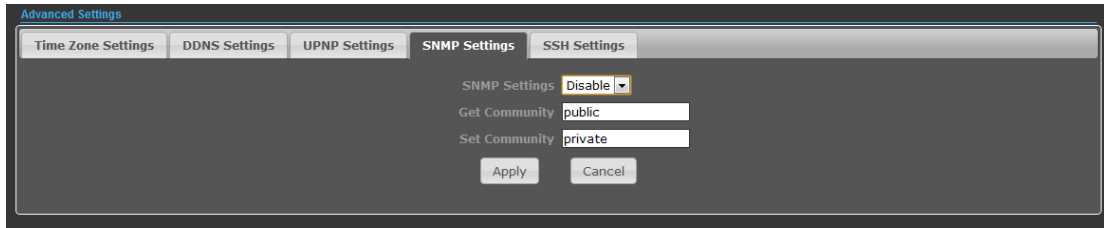


SNMP Settings – Managing devices on IP networks. Default setting is Disabled.

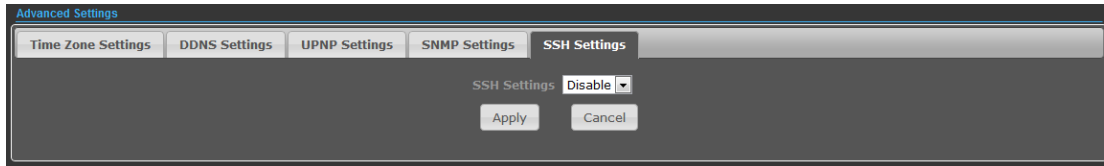

SSH Settings – Secure Shell. Enable your 2.4GHZ 802.11B/G/N AP/ROUTER unit to access secure shell (SSH) based network device. Default setting is Disabled.

OPERATION MODE

The Operation Mode content four modes: AP Bridge, AP Router, Client Router and Client Bridge.

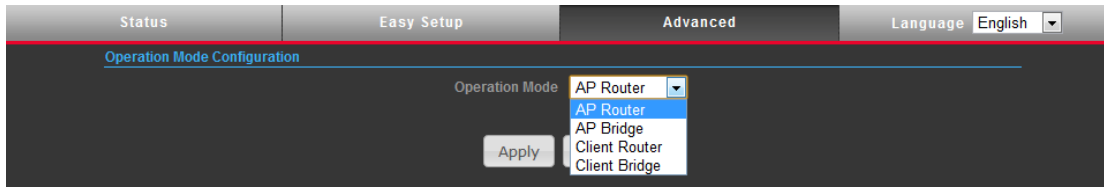

- ◆ **AP Bridge** — The wired Ethernet and wireless are bridged together. Once the mode is selected, all WAN related functions will be disabled.
- ◆ **AP Router** — The WAN port is used to connect with ADSL/Cable modem and the wireless is used for your private WLAN. The NAT is existed between the 2 RJ45 ports and all wireless clients share the same public IP address through the WAN port to ISP. The default IP configuration for WAN port is DHCP client
- ◆ **Client Router** — In the Client Router mode is also known as WISP. The 2.4GHZ 802.11B/G/N AP/ROUTER wireless side is connected to the remote AP (Base-Station) as in Client Infrastructure mode. Between the wireless and LAN is the IP sharing router function. The WAN is on the wireless side.
- ◆ **Client Bridge** — If you want to configure your 2.4GHZ 802.11B/G/N AP/ROUTER as a WiFi client.

FIREWALL CONFIGURATION

MAC/IP/PORT FILTERING

MAC/IP/Port filtering restricts connection parameters to limit the risk of intrusion and defends against a wide array of common hacker attacks. MAC/IP/Port filtering allows the unit to permit, deny or proxy traffic through its MAC addresses, IP addresses and ports. The 2.4GHZ 802.11B/G/N AP/ROUTER allows you define a sequential list of permit or deny filtering rules. This device tests ingress packets against the filter rules one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the packet is either accepted or dropped depending on the default policy setting.

The screenshot shows the 'Advanced' configuration page for MAC/IP/Port Filtering. The 'MAC/IP/Port Filtering' dropdown is set to 'Disable'. The 'Default Policy' dropdown is set to 'Accepted'. Below the settings are 'Apply' and 'Reset' buttons. A table titled 'Current MAC/IP/Port filtering rules in system' is shown with columns: No., MAC address, DIP, SIP, Protocol, DPR, SPR, Action, and Comment. Below the table, it says 'Others would be accepted'.

- ◆ **MAC/IP/Port Filtering** — Enables or disables MAC/IP/Port Filtering.
- ◆ **Default Policy** — When MAC/IP/Port Filtering is enabled, the default policy will be enabled. If you set the default policy to "Dropped", all incoming packets that don't match the rules will be dropped. If the policy is set to "Accepted," all incoming packets that don't match the rules are accepted. (Default: Dropped)
- ◆ **MAC Address** — Specifies the MAC address to block or allow traffic from.
- ◆ **DIP** — Destination IP Address. Specifies the destination IP address to block or allow traffic from.
- ◆ **SIP** — Source IP Address. Specifies the source IP address to block or allow traffic from.
- ◆ **Protocol** — Specifies the destination port type, TCP, UDP or ICMP.
- ◆ **Destination Port Range** — Specifies the range of destination port to block traffic from the specified LAN IP address from reaching.
- ◆ **Source Port Range** — Specifies the range of source port to block traffic from the specified LAN IP address from reaching.
- ◆ **Action** — Specifies if traffic should be accepted or dropped. (Default: Accept)
- ◆ **Comment** — Enter a useful comment to help identify the filtering rules.
- ◆ **Current Filtering rules** — The Current Filter Table displays the configured IP

addresses and ports that are permitted or denied access to and from.

- **No.** — The table entry number.
- **MAC Address** — Displays a MAC address to filter.
- **Destination IP Address (DIP)** — Displays the destination IP address.
- **Source IP Address (SIP)** — Displays the source IP address.
- **Protocol** — Displays the protocol type.
- **Destination Port Range (DPR)** — Displays the destination port range.
- **Source Port Range (SPR)** — Displays the source port range.
- **Action** — Displays if the specified traffic is accepted or dropped.
- **Comment** — Displays a useful comment to identify the filter rules.

VIRTUAL SERVER SETTINGS

Virtual Server (sometimes referred to as Port Forwarding) is the act of forwarding traffic from one network node to another based on received protocol port number. This technique can allow an external user to reach a port on a private IP address (inside a LAN) from the outside through a NAT enabled router. (Maximum 32 entries are allowed.)

Virtual Server

Virtual Server Settings

IP Address

Private Port

Public Port

Protocol

Comment

(The maximum rule count is 32.)

Current Virtual Servers in system

No.	IP Address	Port Mapping	Protocol	Comment
-----	------------	--------------	----------	---------

◆ **Virtual Server** — Selects between enabling or disabling port forwarding the virtual server. (Default: Disable)

◆ **IP Address** — Specifies the IP address of a server on the local network to allow external access.

◆ **Private Port** — The protocol port number on the local server.

- ◆ **Public Port** — The protocol port number on the router's WAN interface.
- ◆ **Protocol** — Specifies the protocol to forward, either TCP, UDP, or TCP&UDP.
- ◆ **Comment** — Enter a useful comment to help identify the port forwarding service on the network.
- ◆ **Current Virtual Servers in System** — The Current Port Forwarding Table displays the entries that are allowed to forward packets through the 2.4GHZ 802.11B/G/N AP/ROUTER's firewall.
 - **No.** — The table entry number.
 - **IP Address** — The IP address of a server on the local network to allow external access.
 - **Port Mapping** — displays the port mapping for the server.
 - **Protocol** — Displays the protocol used for forwarding this port.
 - **Comment** — Displays a useful comment to identify the nature of the port to be forwarded.

DMZ

DMZ is to specified host PC on the local network to access the Internet without any firewall protection. Some Internet applications, such as interactive games or video conferencing, may not function properly behind the firewall. By specifying a Demilitarized Zone (DMZ) host, the PC's TCP ports are completely exposed to the Internet, allowing open two-way communication. The host PC should be assigned a static IP address (which is mapped to its MAC address) and this must be configured as the DMZ IP address.

The screenshot shows a web interface for configuring DMZ settings. The title is "DMZ Settings". There are two main fields: "DMZ Settings" with a dropdown menu currently showing "Enable", and "DMZ IP Address" with an empty text input box. Below these fields are two buttons: "Apply" and "Reset".

- ◆ **DMZ Settings** — Sets the DMZ status. (Default: Disable)
- ◆ **DMZ IP Address** — Specifies an IP address on the local network allowed unblocked access to the WAN.

FIREWALL

Firewall functions which will help to protect your network and computer. You can utilize firmware functions to protect your network from hackers and malicious intruders.

Remote Management Access

Remote Management (via WAN) Deny

Remote Management Port 2020

Ping from WAN Filter

Ping from WAN Filter Allow

Stateful Packet Inspection (SPI)

SPI Firewall Disable

Network Address Translation Settings

Network Address Translation Enable

PPPoE Passthrough Settings


PPPoE Passthrough Setup Disable

Apply Reset

- ◆ **Remote Management (via WAN)** — allow or deny to manage the router from anywhere on the Internet.
- ◆ **Remote Management Port** — The port that you will use to address the management from the Internet. For example, if you specify port 2020, then to access the 2.4GHZ 802.11B/G/N AP/ROUTER from Internet, you would use a URL of the form: `http://xxx.xxx.xxx.xxx:2020/`
- ◆ **Ping from WAN Filter** — When Allow, the 2.4GHZ 802.11B/G/N AP/ROUTER does not respond to ping packets received on the WAN port.
- ◆ **SPI Firewall** — SIP firewall help to keep track of the state of network connections (such as TCP streams, UDP communication) traveling across it. It is programmed to distinguish legitimate packets for different types of connections. Only packets matching a known active connection will be allowed by the firewall; others will be rejected.
- ◆ **Network Address Translation** — NAT is the process of modifying IP address information in IP packet headers while in transit across a traffic routing device.

CONTENT FILTERING

The 2.4GHZ 802.11B/G/N AP/ROUTER provides a variety of options for blocking Internet access based on content, URL and host name.

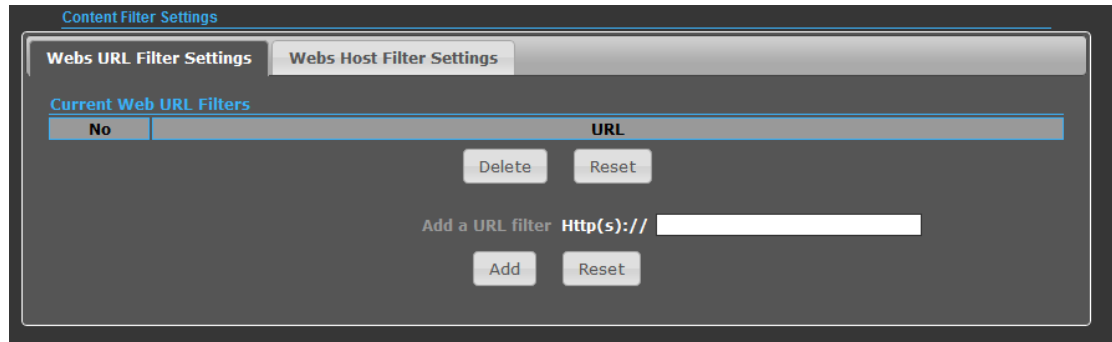

◆ **Web URL Filter Settings** — By filtering inbound Uniform Resource Locators (URLs) the risk of compromising the network can be reduced. URLs are commonly used to point to websites. By specifying a URL or a keyword contained in a URL traffic from that site may be blocked.

◆ **Current URL Filters** — Displays current URL filter.

◆ **Add a URL Filter** — Adds a URL filter to the settings.


◆ **Delete a URL Filter** — Deletes a URL filter entry from the list.

Web Host Filter Settings — Allows Internet content access to be restricted based on web address keywords and web domains. A domain name is the name of a particular web site. For example, for the address www.HOST.com, the domain name is HOST.com. Enter the Keyword then click "Add."

◆ **Current Host Filters** — Displays current Host filter.

◆ **Add a Host Filter** — Enters the keyword for a host filtering.

◆ **Delete a Host Filter** — Deletes a Host filter entry from the list.

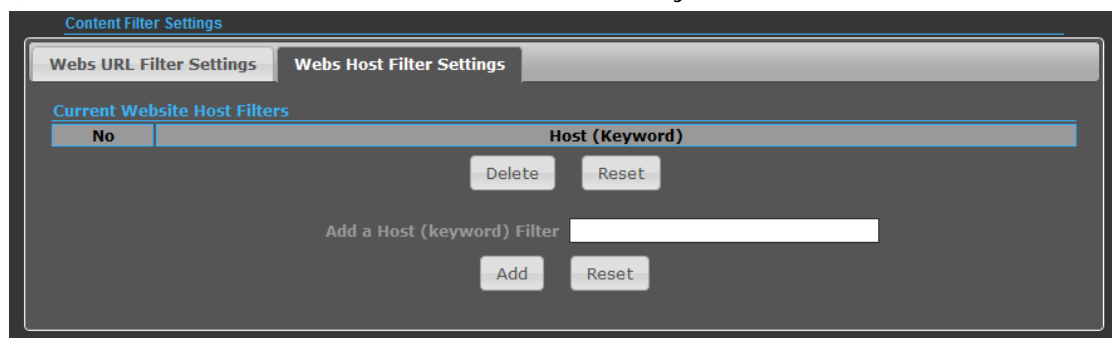


NETWORK SETTINGS

WAN


In this section, there are several connection types to choose from; Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider.

CABLE/DYNAMIC IP (DHCP)

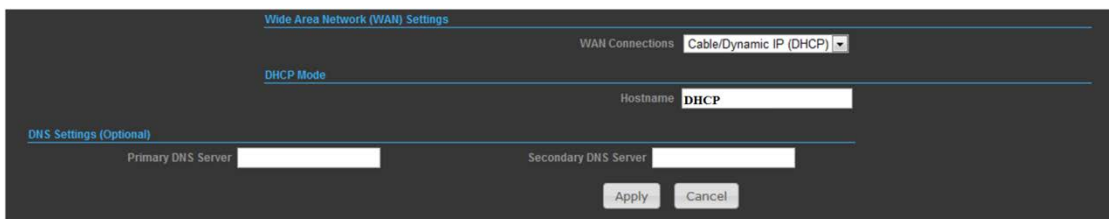

- ◆ **Hostname** — Specifies the host name of the DHCP client.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

PPPoE (ADSL)

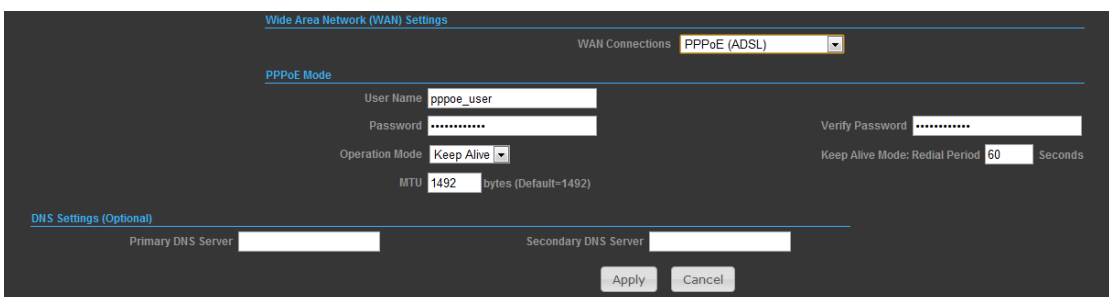

- ◆ **User Name** — Sets the PPPoE user name for the WAN port. (Default: pppoe_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPPoE password for the WAN port. (Default: pppoe_password; Range: 1~32 characters)
- ◆ **Verify Password** — Prompts you to re-enter your chosen password.

◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time.

STATIC IP (FIXED IP)

The screenshot shows the 'Wide Area Network (WAN) Settings' window. At the top, 'WAN Connections' is set to 'Static (Fixed IP)'. Below this, the 'Static Mode' section contains three input fields: 'IP Address' with the value '192.168.3.1', 'Subnet Mask' with '255.255.255.0', and 'Default Gateway' which is empty. A 'DNS Settings' section below has 'Primary DNS Server' and 'Secondary DNS Server' fields, both empty. At the bottom are 'Apply' and 'Cancel' buttons.

◆ **IP Address** — Sets the static IP address.

◆ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)

◆ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.

◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

PPTP

The screenshot shows the 'PPTP Mode' configuration window. It includes fields for 'Server IP' (pptp_server), 'User Name' (pptp_user), and 'Password' (masked with dots). There is an 'Address Mode' dropdown menu set to 'Static IP', followed by 'IP Address' and 'Subnet Mask' input fields. The 'Operation Mode' dropdown is set to 'Keep Alive', and 'Keep Alive Mode: Redial Period' is set to '60' seconds. A 'DNS Settings (Optional)' section at the bottom has 'Primary DNS Server' and 'Secondary DNS Server' fields, both empty. 'Apply' and 'Cancel' buttons are at the bottom right.

◆ **Server IP** — Sets the PPTP server IP Address. (Default: pptp_server)

◆ **User Name** — Sets the PPTP user name for the WAN port.

(Default: pptp_user; Range: 1~32 characters)

◆ **Password** — Sets a PPTP password for the WAN port.

(Default: pptp_password; Range: 1~32 characters)

◆ **Address Mode** — Sets a PPTP network mode. (Default: Dynamic IP)

◆ **Operation Mode** — Enables and configures the keep alive time.

◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

IPSec

The screenshot shows the 'Wide Area Network (WAN) Settings' window with 'IPSEC' selected under 'WAN Connections'. The 'wan ipsec mode' section contains the following fields and values:

- Connection address family: IPv4
- IPSec Connection Type: Road Warrior Tunnel
- IPSec Authentication: SHA-1
- SA connection Life Time: [] hours
- Local IP Address: []
- Local Subnet: []
- Local Gateway: []
- IPSec Tunnel Name: accCONN
- IPSec Key Life time: 12h hours
- NAT Transversal:
- IPSec Compression:
- IPSec Operation Mode: add
- PFS/DH Group: modp1024
- IPSec Encryption: AES
- IKE Key Tries: 3 times
- Peer IP Address: []
- Peer Subnet: []
- Peer Gateway: []
- IPSec Secret Key: PSK
- Perfect Forward Secrets:
- IPSec Conn. Keep Alive:

At the bottom, there are 'DNS Settings (Optional)' for Primary DNS Server and Secondary DNS Server, and 'Apply' and 'Cancel' buttons.

Verify the desired settings and scroll down for more options.

◆ **IPSec Connection Type** – Use drop down menu to select from Road Warrior Tunnel, Host to Host Tunnel, Subnet to Subnet Tunnel, Host to Host Transport, Pass through, Drop, or Reject. Default setting is Road Warrior Tunnel

◆ **IPSec Authentication** – Use drop down menu to select from SHA-1, or MD5. Default setting is SHA1.

◆ **SA Connection Life Time** – Specify how often each SA should be rekeyed, measured in hour.

◆ **Local IP address / Subnet / Gateway** – Local end point IP address, Subnet, and Gateway IP address.

◆ **IPSec Operation Mode** – Use drop down menu to select from Add, Route Start, Manual, or Ignore. Default setting is Add.

◆ **IKE Key Retry** – Specify maximum retry limits for negotiate key to Internet Key Exchange.

◆ **Peer IP address / Subnet / Gateway** – Remote end point IP address, Subnet, and Gateway IP address.

L2TP

L2TP Mode

Server IP: l2tp_server

User Name: l2tp_user Password:

Address Mode: Static IP

IP Address: _____

Subnet Mask: _____

Operation Mode: Keep Alive Keep Alive Mode: Redial Period: 60 Seconds

DNS Settings (Optional)


Primary DNS Server: _____ Secondary DNS Server: _____

Apply Cancel

- ◆ **Server IP** — Sets the L2TP server IP Address. (Default: l2tp_server)
- ◆ **User Name** — Sets the L2TP user name for the WAN port.
(Default: l2tp_user; Range: 1~32 characters)
- ◆ **Password** — Sets a L2TP password for the WAN port.
(Default: l2tp_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a L2TP network mode. (Default: Dynamic IP)
- ◆ **Operation Mode** — Enables and configures the keep alive time.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

LAN

In this section, the LAN settings are configured based on the IP Address and Subnet Mask. The IP address is also used to access this Web-based management interface. It is recommended to use the default settings if you do not have an existing network.

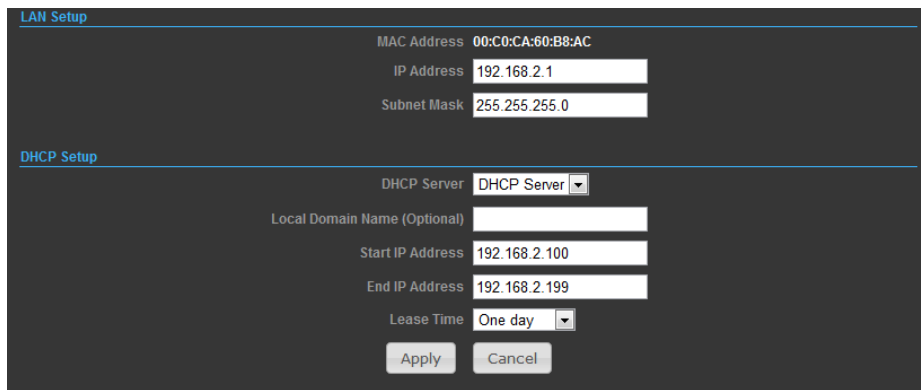

The screenshot shows a configuration interface with two sections: LAN Setup and DHCP Setup. The LAN Setup section includes fields for MAC Address (00:C0:CA:60:B8:AC), IP Address (192.168.2.1), and Subnet Mask (255.255.255.0). The DHCP Setup section includes a dropdown for DHCP Server (DHCP Server), a text field for Local Domain Name (Optional), text fields for Start IP Address (192.168.2.100) and End IP Address (192.168.2.199), and a dropdown for Lease Time (One day). At the bottom are Apply and Cancel buttons.

◆ **IP Address** — The IP address of 2.4GHZ 802.11B/G/N AP/ROUTER on the local area network.

(Default: 192.168.2.1)

◆ **Subnet Mask** — The subnet mask of 2.4GHZ 802.11B/G/N AP/ROUTER on the local area network

◆ **DHCP Server** — The DHCP Server is to assign private IP address to the 2.4GHZ 802.11B/G/N AP/ROUTER in your local area network(LAN). The default LAN IP address is 192.168.2.1, changing IP address will also change the DHCP server's IP subnet.

ADVANCED ROUTING

In this section, allow to configure routing feature in the 2.4GHZ 802.11B/G/N AP/ROUTER.

Advanced Routing Settings

Add a routing rule

Destination

Type

Gateway

Interface

Comment

Current Routing table in the system

No.	Destination	Netmask	Gateway	Flags	Metric	Ref	Use	Interface	Comment
1	255.255.255.255	255.255.255.255	0.0.0.0	5	0	0	0	LAN(br0)	
2	192.168.2.0	255.255.255.0	0.0.0.0	1	0	0	0	LAN(br0)	

Dynamic Routing Protocol

RIP

- ◆ **Destination** — The IP address of packets that can be routed.
- ◆ **Type** — Defines the type of destination. (Host: Signal IP address / Net: Portion of Network)
- ◆ **Netmask** — Displays the subnetwork associated with the destination.
- ◆ **Gateway** — Defines the packets destination next hop
- ◆ **Interface** — Select interface to which a static routing subnet is to be applied
- ◆ **Comment** — Help identify the routing
- ◆ **RIP** — Enable or disable the RIP(Routing Information Protocol) for the WAN or LAN interface.

WIRELESS SETTINGS

BASIC

Basic Wireless Settings

Wireless Mode: Access Point

Multiple SSID:

Country Code: Germany

Frequency (Channel): 2437 MHz (Channel 6)

Site Survey:

Network Mode: WiFi 11gn HT20

Extension Channel: Upper Channel

Distance: 0.8 miles (km)

ACK Timeout: 35

SSID Security Settings

Network Name (SSID): SSID NAME Hide

WPS Choice:

Encryption Settings: Disable

◆ **Wireless On/Off** — Enables or Disable the radio. (Default: Turn On)

◆ **Wireless Mode** — There are 4 wireless mode, those are Access Point, WDS Access Point, WDS Repeater and WDS Client

Note.

If WEP authentication is selected for WDS communication, you will then only have one set of encryption for the entire channel.

◆ **Network Name (SSID)** — The name of the wireless network service provided by the 2.4GHZ 802.11B/G/N AP/ROUTER. Clients that want to connect to the network must set their SSID to the same as that of 2.4GHZ 802.11B/G/N AP/ROUTER.

(Range: 1-32 characters)


◆ **Multiple SSID** — One additional VAP interface supported on the device. (Default: no name configured; Range: 1-32 characters)

◆ **Frequency (Channel)** — The radio channel that the 2.4GHZ 802.11B/G/N AP/ROUTER uses to communicate with wireless clients.

◆ **Network Mode** — Defines the radio operating mode. (Default: 11an HT20)


◆ **Packet Aggregate** — The process of joining multiple packets together into a single transmission unit, in order to reduce the overhead associated with each transmission.

SECURITY

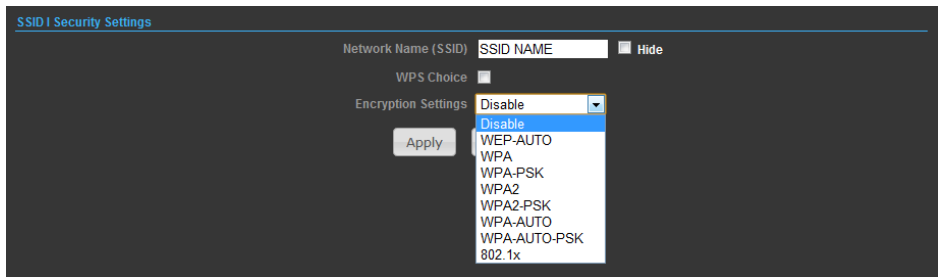

WIRED EQUIVALENT PRIVACY (WEP)

WEP provides a basic level of security, preventing unauthorized access to the network, and encrypting data transmitted between wireless clients and an access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network. When you select to use WEP, be sure to define at least one static WEP key for user authentication or data encryption. Also, be sure that the WEP shared keys are the same for each client in the wireless network.

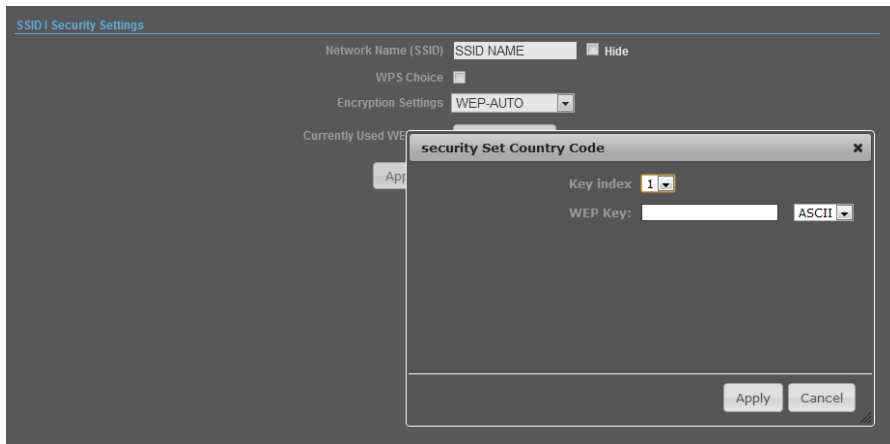

- ◆ **WEP-AUTO** — Allows wireless clients to connect to the network using Open-WEP (uses WEP for encryption only) or Shared-WEP (uses WEP for authentication and encryption).
- ◆ **Encrypt Type** — Selects WEP for data encryption (OPEN mode only).
- ◆ **Security Key Index** — Selects the WEP key number to use for authentication or data encryption. If wireless clients have all four WEP keys configured to the same values, you can change the encryption key to any of the settings without having to update the client keys. (Default: 1; Range: 1~4)
- ◆ **WEP Keys** — Sets WEP key values. The user must first select ASCII or hexadecimal keys. Each WEP key has an index number. Enter key values that match


the key type and length settings. Enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or enter 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys. (Default: Hex, no preset value)

Note.

If WEP authentication is selected for WDS communication, you will then only have one set of encryption for the entire channel.

WPA & WPA2

Wi-Fi Protected Access (WPA) was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA.

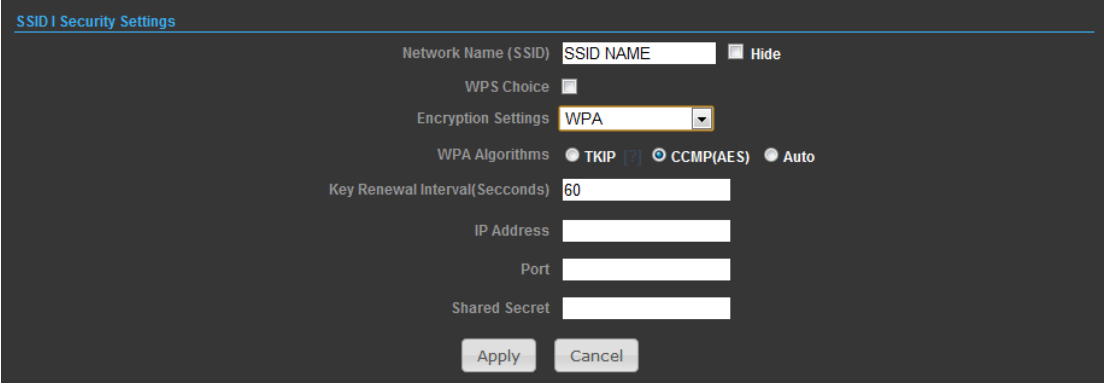

- ◆ **WPA** — Clients using WPA for authentication.
- ◆ **WPA2** — Clients using WPA2 for authentication.
- ◆ **WPA-Auto** — Clients using WPA or WPA2 for authentication.
- ◆ **WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
 - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
 - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
 - **Auto** — Uses either TKIP or AES keys for encryption. WPA and

WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.

◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

RADIUS Server — Configures RADIUS server settings.


◆ **IP Address** — Specifies the IP address of the RADIUS server.

◆ **Port** — The User Datagram Protocol (UDP) port number used by the RADIUS server for authentication messages. (Range: 1024-65535; Default: 1812)

◆ **Shared Secret** — A shared text string used to encrypt messages between the access point and the RADIUS server. Be sure that the same text string is specified on the RADIUS server. Do not use blank spaces in the string. (Maximum length: 20 characters)

WPA-PSK & WPA2-PSK

Wi-Fi Protected Access (WPA) was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an “enterprise” and “personal” mode of operation. For small home or office networks, WPA and WPA2 provide a simple “personal” operating mode that uses just a pre-shared key for network access. The **WPA Pre-Shared Key (WPA-PSK)** mode uses a common password phrase for user authentication that is manually entered on the access point and all wireless clients. Data encryption keys are automatically generated by the access point and distributed to all clients connected to the network.

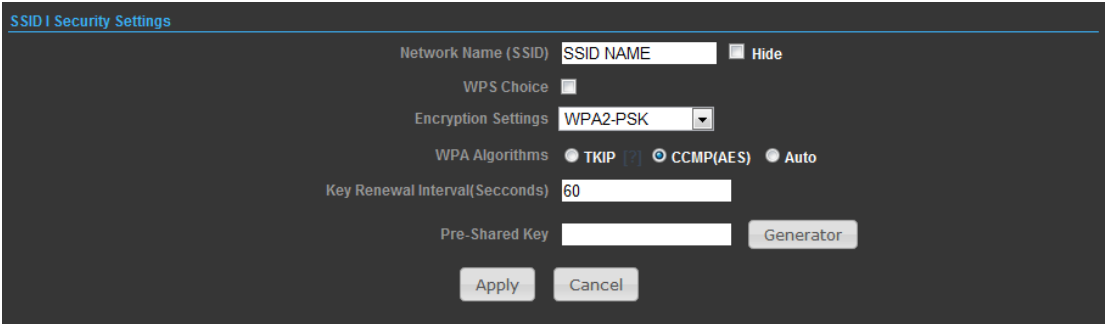

The screenshot shows the 'SSID Security Settings' interface. It includes a 'Network Name (SSID)' field with 'SSID NAME' and a 'Hide' checkbox. Below is a 'WPS Choice' checkbox, an 'Encryption Settings' dropdown menu set to 'WPA2-PSK', and 'WPA Algorithms' radio buttons for 'TKIP', 'CCMP(AES)', and 'Auto'. The 'Key Renewal Interval(Seconds)' is set to '60'. There is a 'Pre-Shared Key' input field and a 'Generator' button. At the bottom are 'Apply' and 'Cancel' buttons.

◆ **WPA-PSK** — Clients using WPA with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is TKIP.

◆ **WPA2-PSK** — Clients using WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is AES.


- ◆ **WPA- Auto-PSK** — Clients using WPA or WPA2 with a Preshared Key are accepted for authentication. The default data encryption type is TKIP/AES.
- ◆ **WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
 - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
 - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
 - **Auto** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)
- ◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

IEEE 802.1X AND RADIUS

IEEE 802.1X is a standard framework for network access control that uses a central RADIUS server for user authentication. This control feature prevents unauthorized access to the network by requiring an 802.1X client application to submit user credentials for authentication. The 802.1X standard uses the Extensible Authentication Protocol (EAP) to pass user credentials (either digital certificates, user names and passwords, or other) from the client to the RADIUS server. Client authentication is then verified on the RADIUS server before the client can access the network. Remote Authentication Dial-in User Service (RADIUS) is an authentication protocol that uses software running on a central server to control access to RADIUS-aware devices on the network. An authentication server contains a

database of user credentials for each user that requires network access.

The WPA and WPA2 enterprise security modes use 802.1X as the method of user authentication. IEEE 802.1X can also be enabled on its own as a security mode for user authentication. When 802.1X is used, a RADIUS server must be configured and be available on the connected wired network.

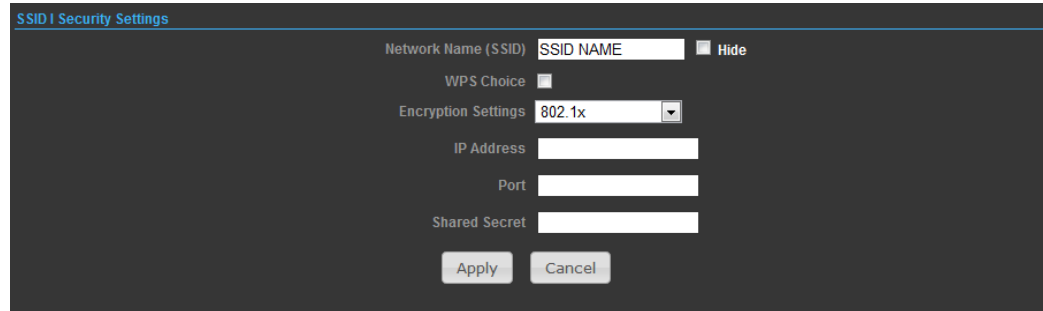

802.1X WEP: Selects WEP keys for data encryption. When enabled, WEP encryption keys are automatically generated by the RADIUS server and distributed to all connected clients. (Default: Disabled)

RADIUS Server — Configures RADIUS server settings.

◆ **IP Address** — Specifies the IP address of the RADIUS server.


◆ **Port** — The User Datagram Protocol (UDP) port number used by the RADIUS server for authentication messages. (Range: 1024-65535; Default: 1812)

◆ **Shared Secret** — A shared text string used to encrypt messages between the access point and the RADIUS server. Be sure that the same text string is specified on the RADIUS server. Do not use blank spaces in the string. (Maximum length: 20 characters)

Wi-Fi Protected Setup (WPS)

Wi-Fi Protected Setup (WPS) is designed to ease installation and activation of security features in wireless networks. WPS has two basic modes of operation, Push-button Configuration (PBC) and Personal Identification Number (PIN). The WPS PIN setup is optional to the PBC setup and provides more security. The WPS button on the 2.4GHZ 802.11B/G/N AP/ROUTER can be pressed at any time to allow a single device to easily join the network. The WPS Settings page includes configuration options for setting WPS device PIN codes and activating the virtual WPS button.

Click on "Wireless Settings," followed by "WPS".

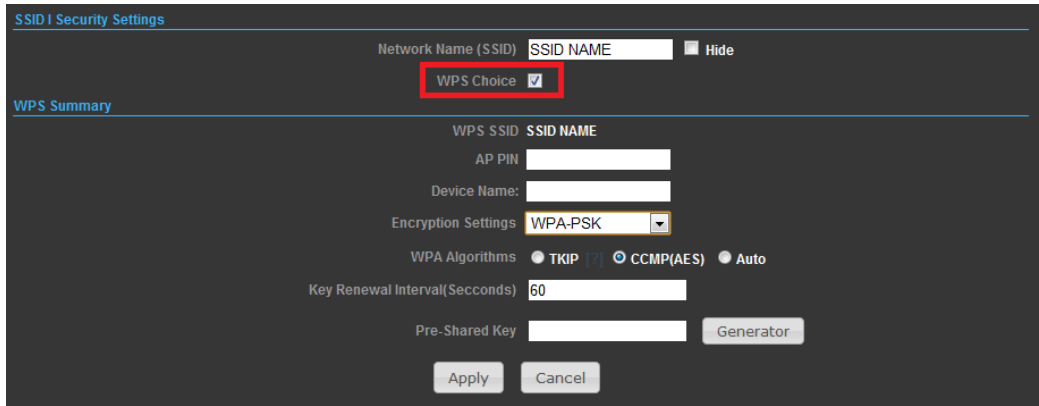

- ◆ **WPS SSID** — The service set identifier for the unit.
- ◆ **AP PIN** — Displays the PIN Code for the 2.4GHZ 802.11B/G/N AP/ROUTER. The default is exclusive for each unit.
- ◆ **Device Name** — WPS name for connecting to the device.
- ◆ **Encryption Settings** — Selects between methods of broadcasting the WPS beacon to network clients wanting to join the network:
- ◆ **WPA Algorithms** — Selects the data encryption type to use.
 - TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
 - AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
 - Auto** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients.
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)